

## ELAD DUO-ART - RELEASE STATUS

### Last release :

**December 6, 2018**

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.26</b> Date: 12/06/2018	Fixed attenuators management issue at startup. Changed the visualization of the versions in the Information Window.

NB: changes compared to previous release are **highlighted in yellow**.

### Previous releases :

**November 27, 2018**

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.25</b> Date: 11/27/2018	Fixed screensaver management issue. Fixed fan management issue. Fixed preselectors management issue. Improved the visualization and the management of the Memory Bank Window fields. Fixed fan management issues. Added the possibility to turn off the unit by a long press when the Information Window is displayed.

**November 6, 2018**

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.20</b> Date: 11/06/2018	Added the possibility to turn off the unit by a long press when the Memory Bank Window is displayed. Added menu 32 "View on TX" that allows to choose the View displayed during transmission. Added several improvements regarding low-level communication with the FDM-DUO. Fixed fan management issues. Added improvements in the ATU management.

**August 3, 2018**

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.7</b> Date: 08/03/2018	Added improvements in the ATU management.

### August 2, 2018

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.5</b> Date: 08/02/2018	<p>Selected View is now remembered after power cycle.</p> <p>Improved software update management.</p> <p>The power set in the Memory Bank Window is now send to the FDM-DUO, if the related AmpEnable setting is On.</p> <p>Added the menu "FAN CONTROL – Work Mode" that have two choices :</p> <ul style="list-style-type: none"> <li>- High Performance : fan at 100% during Tx, lower temperature limits,</li> <li>- SSB : fan not at 100% during Tx, higher temperature limits.</li> </ul>

### July 10, 2018

<b>Firmware (FW)</b>	Version: <b>1.2</b> Date: 06/28/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.2</b> Date: 07/10/2018	<p>Fixed issues in tune-up management.</p> <p>Corrected various user interface writings.</p> <p>Added security checks on the PTT input.</p> <p>Improved temperature management.</p>

### June 27, 2018

<b>Firmware (FW)</b>	Version: <b>1.1</b> Date: 06/27/2018	Added improvements in hardware management.
<b>Software (UI)</b>	Version: <b>1.0</b> Date: 06/27/2018	First v1.xx release.

### June 19, 2018

<b>Firmware (FW)</b>	Version: <b>1.0</b> Date: 06/19/2018	First v1.xx release.
<b>Software (UI)</b>	Version: <b>0.65</b> Date: 06/19/2018	Menu order reorganized .

### June , 2018

<b>Firmware (FW)</b>	Version: <b>0.x</b> Date: 06/-/2018	Beta version.
<b>Software (UI)</b>	Version: <b>0.x</b> Date: 06/-/2018	Beta version.